
1/144 SCALE

# Chinese J-20 Mighty Dragon

中国歼二十"威龙"隐形战斗机

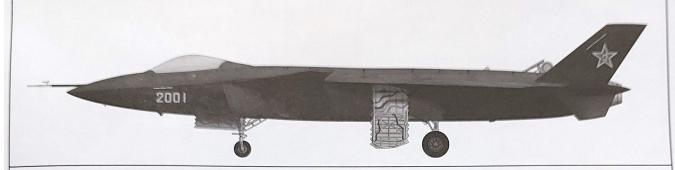

#### READ BEFORE ASSEMBLY:

- · Study and understand these instructions thoroughly before beginning assembly
- · When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid
- · Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters, long nose pliers, modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

### 装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件,不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水 使用可能导致可动零件会粘住, 小心涂胶。
- 取蚀刻片时应特别注意安全,防止利边划伤手指。
- 某些零件表面需贴上水贴纸,请选择在装配的同时进行。
- 推荐模型工具(自备): 胶水,水口剪刀,长咀钳,刀片, 锉刀,镊子,钳,钻,剪刀,瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆,模型内不含。





Cyanoacrylate glue



Make hole



Cut / Remove











## 水贴纸的使用:


- 1.从水贴纸上剪下印花;
- 2.将印花放入温水中浸10秒,然后 放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干, 汽泡消失


### **DECAL APPLICATION**


- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3. Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.
- 4. While still wet, decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5. When placed in the proper position, gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model

# 部品图

# Parts

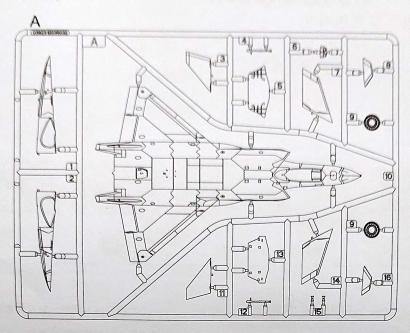

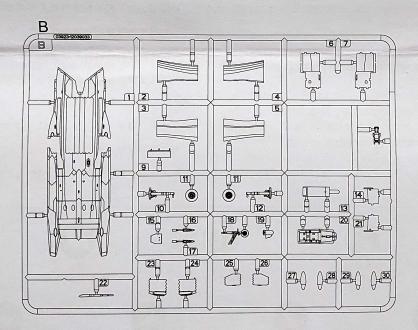



《水贴》 Decal



